DuploTEC® 688 SBF – PU Film



DuploTEC® 688 SBF is a Structural Bonding Film based on polyurethane technology for fast bonding processes and low activation temperatures.

The thermosetting film unites the advantages of an easy to handle adhesive film with structural bonding performance and can be used for bonding various materials.

	Material	Colour	Thickness in µm (mil)
Liner	Silicone paper	yellow	80 (3.2)
Adhesive	Thermosetting PU Film	translucent	100 (3.9)

Features & benefits

- ✓ Pre-applicable on most substrates
- ✓ High cohesion strength after cross-linking
- ✓ High adhesion on a wide range of substrates
- ✓ Good resistance to UV-radiation and temperature
- ✓ No creeping due to cross-linking
- Clean and fast application process (Pick & place; manual, semi-automatic or even fully automatic)
- ✓ The adhesive film is not tacky at ambient room temperature
- ✓ Constant and smooth film thickness
- ✓ Immediate high bonding strength enables a quick further processing
- ✓ Excellent die-cutting and converting properties
- ✓ DuploTEC® 688 SBF can be integrated into a production process either as a roll, spool or an ultra-precise die-cut part

Application instructions - processing

Surface preparation

- Surfaces must be clean, dry and free from dust, grease, oil and release agents
- Clean by using a clean cloth & suitable solvents
- Surface energy must be at least 38 mN/m

We advise to check the temperature resistance of materials prior to bonding.

Prelamination (optionally)

- Initial tack is realized by heating the PU film
- Allowed temperature range 50 55 °C (122 131 °F)
- Recommended pressure: 15 75 N/cm²

Bonding and curing

- Recommended curing temperature: 100 °C – 160 °C (212 °F – 320 °F)
- Recommended curing pressure:
 15 75 N/cm² (22 109 psi)


Curing time depends on substrate thickness and its thermal conductivity and capacity.
Curing can be achieved with a variety of machines, such as hot laminating machines, heat presses, fusing machines, moulding lines and comparable laminating equipment

Postcuring conditions

- We recommend to keep bonding under pressure until it has cooled to below 40 °C (104 °F)
- · Final strength is achieved 24 h after curing



DuploTEC® 688 SBF – PU Film

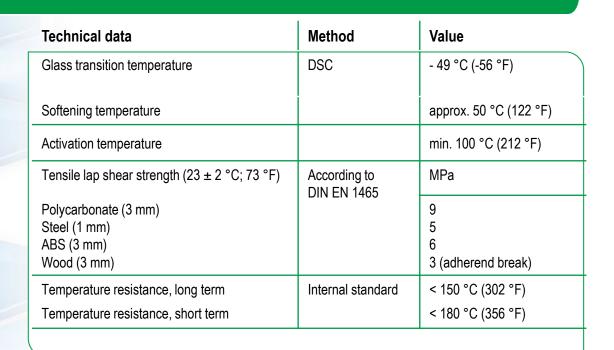

Storage / Shelf life

- DuploTEC® 688 SBF has to be stored and transported at temperatures below +35 °C (95 °F) at normal humidity level of (50 - 70 %)
- Shelf life is one year after delivery
- After prelamination to one substrat at ≤ 55 °C (131 °F) shelf life is three months

Safety precautions

- Please pay attention to the General Material Safety Information before using DuploTEC® 688 SBF the first time
- DuploTEC® 688 SBF is compliant with the requirements: Directive 2011/65/EU – RoHS and Regulation (EC) No 1907/2006 - REACh
- DuploTEC® 688 SBF is free of benzene, phenolics, toluene and formaldehyde
- DuploTEC® 688 SBF is free of APEOs and styrene according to the current GADSL guideline

Important note

The physical characteristics contained in this data sheet represent typical or average values. All application related statements, information and recommendations herein are given to the best of our knowledge and practical experience. Many factors beyond our control and uniquely within buyer's knowledge and control can affect the use and performance of our tape in a particular application. EXCEPT AS EXPRESSIVELY AGREED IN WRITING WE DO NOT TAKE OVER ANY WARRANTY OR LIABILITY FOR THE SUITABILITY OR USABILITY OF OUR TAPES FOR CERTAIN PURPOSES AND APPLICATIONS RESULTING FROM BUYER'S SPECIAL USAGE OF THE TAPES: EXCEPT WHERE PROVIDED BY MANDATORY LEGAL PROVISIONS; WE WILL NOT BE LIABLE FOR ANY DIRECT OR INDIRECT MATERIAL OR IMMATERIAL LOSSES OR DAMAGES ARISING FROM THE USAGE OR APPLICATION OF OUR TAPES. Solely the buyer is responsible for determining the suitability of the specific tape for its use in connection with his method of application. Please consult our Technical Applications Department for specific advice.

In case of any further questions regarding product safety (confirmation, conformity to guidelines, REACh, etc.) please use the following e-mail address: ae@lohmann-tapes.com

